

Model 399-MAX Retrofit Kit


Single Column Electronic Vender

399-59 RetroMax – Drop Shelf, Coin & CryptoPay Credit Option


399-60 RetroMax – Drop Shelf, Coin Only

399-70D RetroMax – Drop Shelf Diaper Vender, Coin Only

399-72D RetroMax – Drop Shelf Diaper Vender, Coin & CryptoPay Credit Option

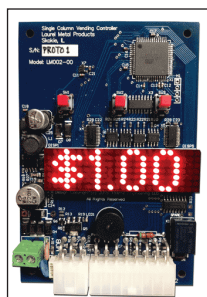

DigiMax Circuit Board

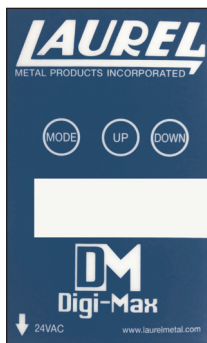

Circuit Board Cover

Installations Steps:

1. Switch off power to vending machine and disconnect the wires from the green circuit board. You will need the small-tip screwdriver to disconnect the power wires. Unplug the wire harness from the bottom of the green circuit board. Remove the black plastic instruction sheet that covers the front of the green board.
2. Press the green board from behind (at the top) and pull the board from below to remove the circuit board from the 4 plastic snap-in mounting posts.
3. Press the Digi-Max board onto the 4 plastic snap-in mounting posts until there is a “snap” at each post.
4. Connect 2 power wires to the Digi-Max incoming power terminal block at the bottom left hand corner. Incoming power is to be 24 volt AC with ½ amp power (min.) and note that wires are not specific to either lug point.

There is no difference in the power requirement for the old green board or the new Digi-Max board

The dot matrix scrolling display will show Insert Coins, Pay \$1.00, alternating.

5. Plug in the wire harness to the bottom of the blue circuit board. The small plug to the left is for the optional CryptoPay swiper. Use the programming decal on the inside of the new door for price or program changes.
6. Using the 11/32” open end wrench, remove the 6 sets of fasteners holding the old door to the cabinet and remove door. Re-mount the new door in the same position. This task will be easier with a helping hand to support the door assembly (12 pounds).
7. Apply the new blue plastic instruction/cover sheet in the same position as the black cover sheet that was removed in Step 1. There is adhesive at the top of the instruction sheet.

Tools Needed:

- 11/32” open end wrench
- Flat blade screwdriver – standard size tip
- Flat blade screwdriver – 3/16” (max.) tip

Parts Included:

- Door Assembly – complete w/fasteners
A second person to hold and support the weight is encouraged for safety.
- DigiMax circuit board
- Plastic circuit board cover